Caracterización de la cámara CCD del telescopio GOTO de Cerro Calán


> Prof. S. López Departamento de Astronomía

> > Marzo 2010

Caracterización de la cámara CCD del telescopio GOTO de Cerro Calán

Fundamentos

Efecto fotoeléctrico

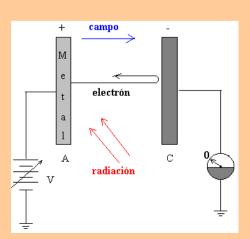


Caracterización de la cámara CCD del telescopio GOTO de Cerro Calán

Fundamentos

Efecto fotoeléctrico


Explicado por Einstein en 1905 (Nobel)




Caracterización de la cámara CCD del telescopio GOTO de Cerro Calán

Fundamentos

No se puede explicar si la luz es una onda

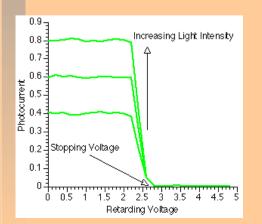

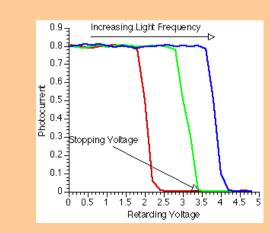


Caracterización de la cámara CCD del telescopio GOTO de Cerro Calán


Fundamentos

K = hv - W

- hv = Energia del foton incidente.
- W = Trabajo necesario para sacar al electron del metal.

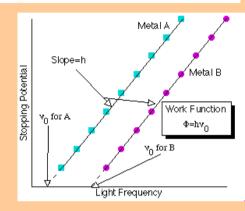

CCD: Charge Coupled Device

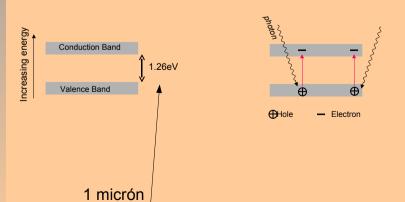


Caracterización de la cámara CCD del telescopio GOTO de Cerro Calán

Diferentes valores de la función de trabajo


Element	Work Function(eV)
Aluminum	4.08
Beryllium	5.0
Cadmium	4.07
Calcium	2.9
Carbon	4.81
Cesium	2.1
Cobalt	5.0
Copper	4.7
Gold	5.1
Iron	4.5
Lead	4.14
Magnesium	3.68
Mercury	4.5
Nickel	5.01

Analogía

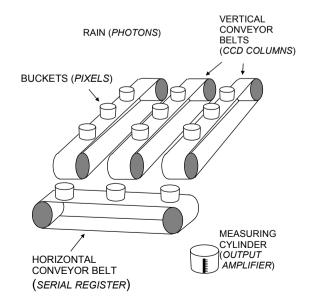


Exposure finished, buckets now contain samples of rain.


Conveyor belt starts turning and transfers buckets. Rain collected on the vertical conveyor is tipped into buckets on the horizontal conveyor.

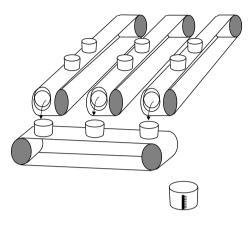



Vertical conveyor stops. Horizontal conveyor starts up and tips each bucket in turn into the measuring cylinder .

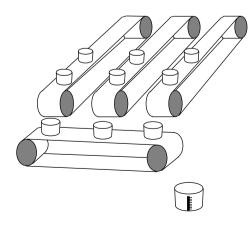



After each bucket has been measured, the measuring cylinder is emptied , ready for the next bucket load.

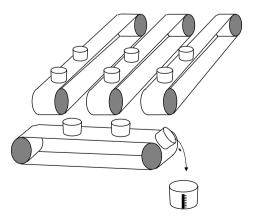


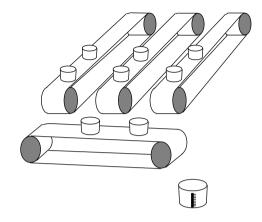


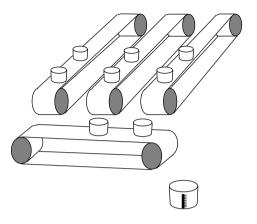

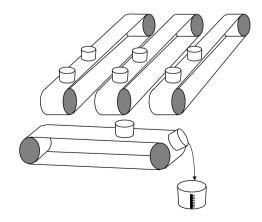


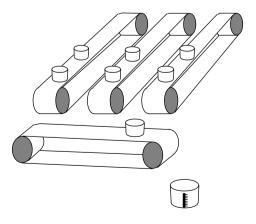


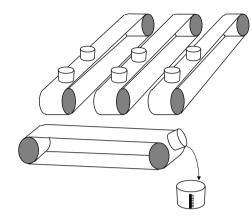


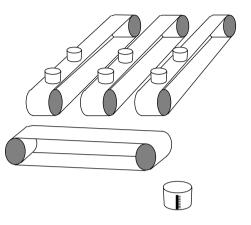



A new set of empty buckets is set up on the horizontal conveyor and the process is repeated.

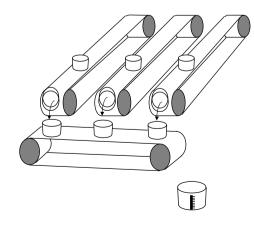


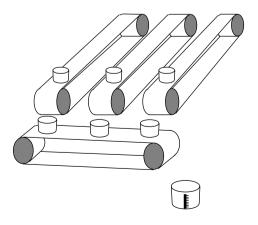


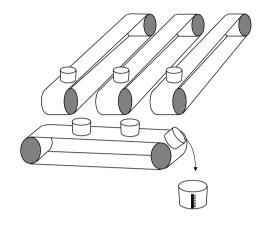


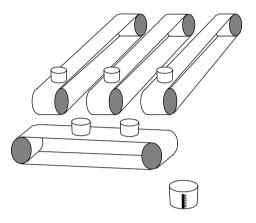


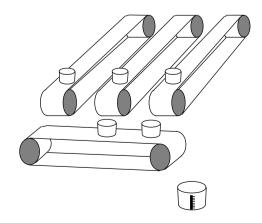


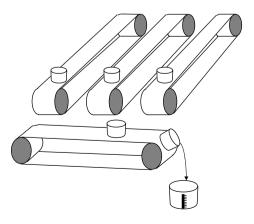


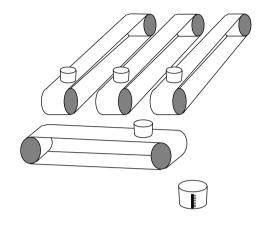


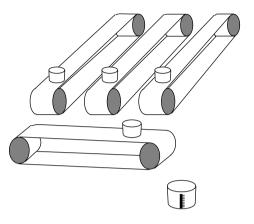


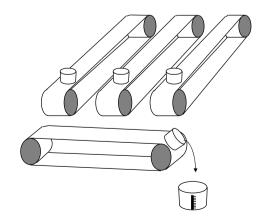


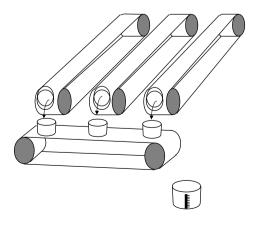


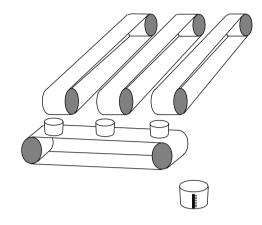


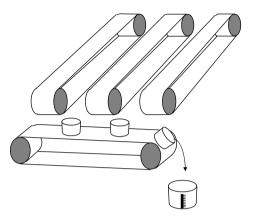

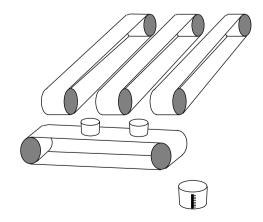


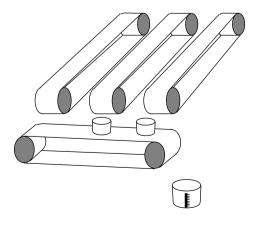


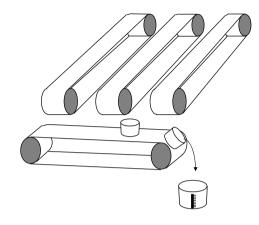

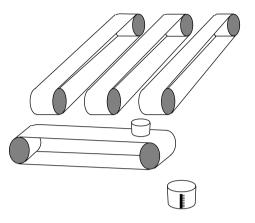


Eventually all the buckets have been measured, the CCD has been read out.

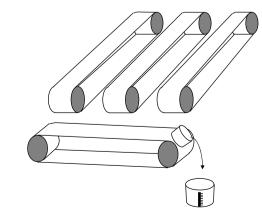

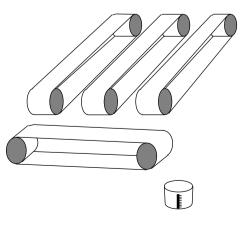

Structure of a CCD 1.


The image area of the CCD is positioned at the focal plane of the telescope. An image then builds up that consists of a pattern of electric charge. At the end of the exposure this pattern is then transferred, pixel at a time, by way of the serial register to the on-chip amplifier. Electrical connections are made to the outside world via a series of bond pads and thin gold wires positioned around the chip periphery.

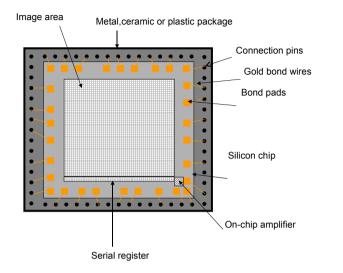

Structure of a CCD 2.

CCDs are are manufactured on silicon wafers using the same photo-lithographic techniques used to manufacture computer chips. Scientific CCDs are very big ,only a few can be fitted onto a wafer. This is one reason that they are so costly.


The photo below shows a silicon wafer with three large CCDs and assorted smaller devices. A CCD has been produced by Philips that fills an entire 6 inch wafer! It is the worlds largest integrated circuit.

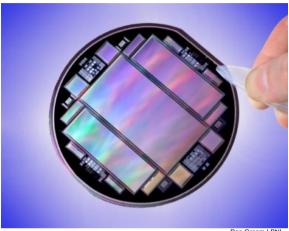

Don Groom LBNL


Structure of a CCD 4.

Below the image area (the area containing the horizontal electrodes) is the 'Serial register'. This also consists of a group of small surface electrodes. There are three electrodes for every column of the image area

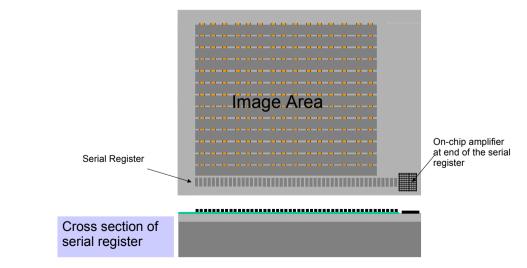

Structure of a CCD 3.


The diagram shows a small section (a few pixels) of the image area of a CCD. This pattern is reapeated.

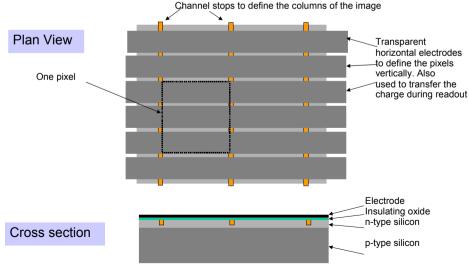

Every third electrode is connected together. Bus wires running down the edge of the chip make the connection. The channel stops are formed from high concentrations of Boron in the silicon.

Once again every third electrode is in the serial register connected together.


Structure of a CCD 5.

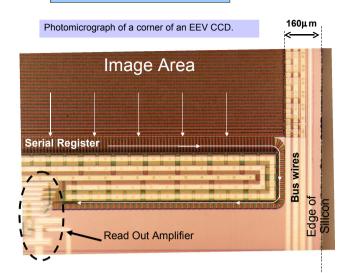

The serial register is bent double to move the output amplifier away from the edge of the chip. This useful if the CCD is to be used as part of a mosaic. The arrows indicate how charge is transferred through the device.


Structure of a CCD 6.


Photomicrograph of the on-chip amplifier of a Tektronix CCD and its circuit diagram.

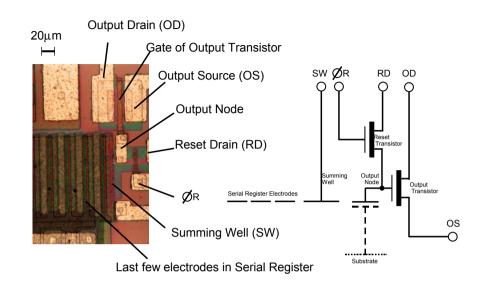

Electric Field in a CCD 2.

During integration of the image, one of the electrodes in each pixel is held at a positive potential. This further increases the potential in the silicon below that electrode and it is here that the photoelectrons are accumulated. The neighboring electrodes, with their lower potentials, act as potential barriers that define the vertical boundaries of the pixel. The horizontal boundaries are defined by the channel stops.

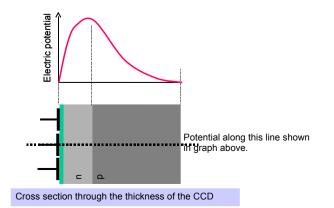

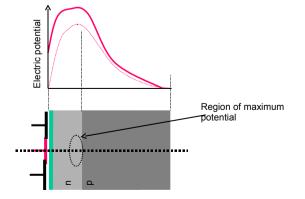



Electric Field in a CCD 1.

The n-type layer contains an excess of electrons that diffuse into the p-layer. The p-layer contains an excess of holes that diffuse into the n-layer. This structure is identical to that of a diode junction. The diffusion creates a charge imbalance and induces an internal electric field. The electric potential reaches a maximum just inside the n-layer, and it is here that any photo-generated electrons will collect. All science CCDs have this junction structure, known as a 'Buried Channel'. It has the advantage of keeping the photo-electrons confined away from the surface of the CCD where they could become trapped. It also reduces the amount of thermally generated noise (dark current).

Charge Collection in a CCD.

Photons entering the CCD create electron-hole pairs. The electrons are then attracted towards the most positive potential in the device where they create 'charge packets'. Each packet corresponds to one pixel

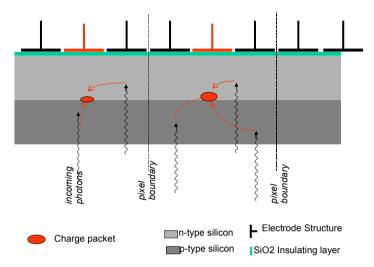


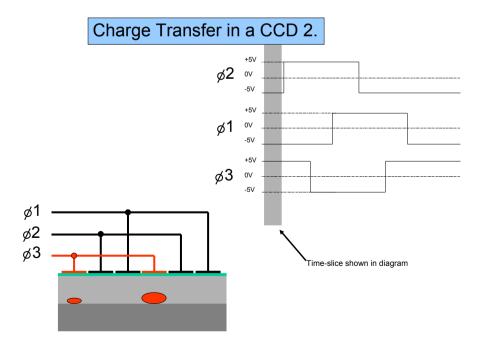



Charge Transfer in a CCD 1.


In the following few slides, the implementation of the 'conveyor belts' as actual electronic structures is explained.


The charge is moved along these conveyor belts by modulating the voltages on the electrodes positioned on the surface of the CCD. In the following illustrations, electrodes colour coded red are held at a positive potential, those coloured black are held at a negative potential.

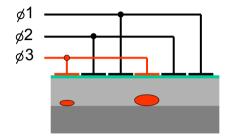


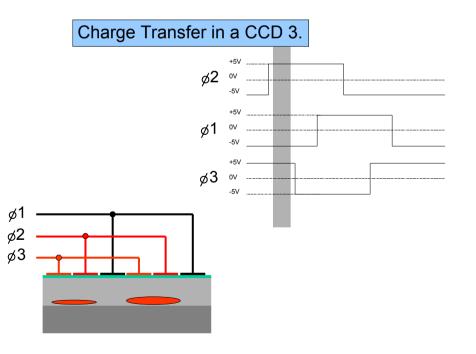

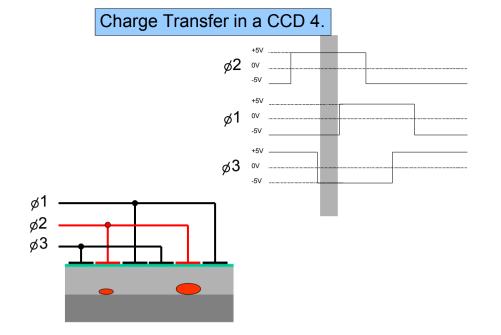

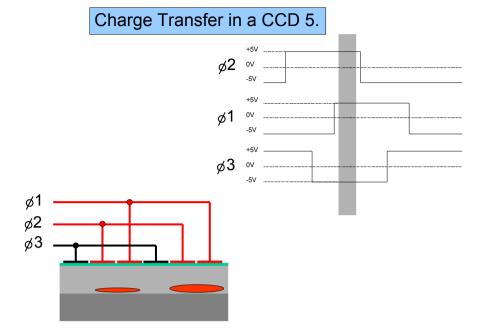

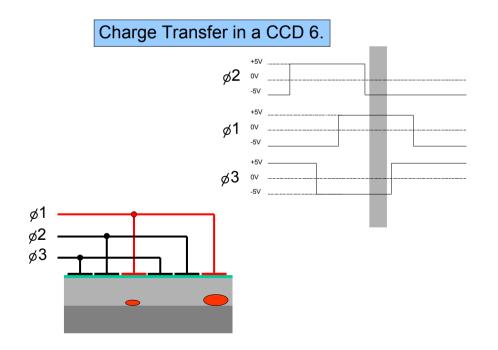

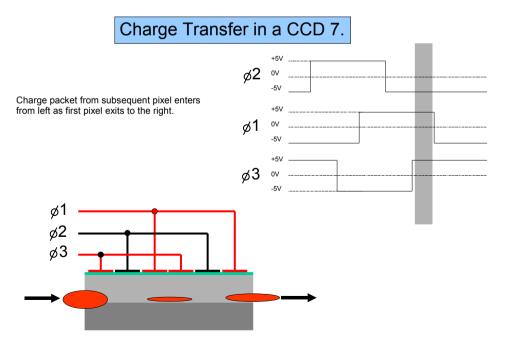

Charge Transfer in a CCD 8.

